



Radio Controlled Operation

The Braun Time Control Classic is set and controlled automatically by MSF radio signal. It is a dedicated time broadcast that provides an accurate and reliable source of UK civil time, based on the NPL time scale UTC(NPL).

Radio Controlled Operation MSF Version (UK Only)

Once the battery is inserted within approximately three minutes the hour and minute hand will move to one of the three stand by positions at 4:00, 8:00 or 12:00 o'clock depending on which is the closest to the actual hands position. The LCD display will toggle between "00" and "- -" when the hands are moving to one of the stand by position, 4:00, 8:00 or 12:00 o'clock position.

After the hands have reached this position the clock will search for the Radio Controlled signal, the LCD display will show running seconds. If the signal is strong in your area, within 10 minutes the clock will be set to a correct time. The hour and minute hands will move to the actual time position. Please note that the hands will not move until successful signal is received.

A time check is carried out each even hour and additionally at 3 o'clock am and time is compared with the radio signal and will be corrected if necessary.

Radio Controlled Interference

If the reception is interrupted, the LCD display will show "- -". If this happens, please move the clock to another position where a valid signal can be received. If there is no Radio Controlled reception the clock can be set manually by following below procedures. Once a successful reception is received the clock will correct itself automatically to the radio control time.

- **The Radio Control reception will improve if the clock is placed near to a window with curtains and blinds open.**

- **Do not place the item too near to electrical appliances such as televisions, microwaves, speakers, computers or fax machines.**

Manual Time Setting MSF Version (UK Only)

Note: The clock can only be set manually when it is in stand by mode position at 4:00, 8:00 or 12: o'clock position.

If a signal is not received after 10 minutes or if you wish to set the time before the signal is received, follow below procedures to set the time manually.

- Press and hold the time set button for approximately 5 seconds to enable manual setting. The minute hand will move at an increased speed.

- When the hands rotate nearer to the desired time, press time set button again and minute hand will move at a slower speed.

- Once the hands move to the desired time, press time set button once more to confirm the setting. The minute hand will stop at this position and LCD display will show seconds counting from "00".

NOTE: If Time Set button is pressed again the clock will set itself to RESET mode and the display will show "bc". The clock cannot be set manually at this point. In order to set time manually again battery needs to be removed and replaced. The clock hands will move to one of the standby position at 4:00, 8:00 or 12:00 o'clock. Once the hands are set to one of the stand by position follow the above procedures to set time manually.

Important:

- Once the desired manual time is set the clock will not receive Radio Controlled signal. To receive the Radio Controlled signal remove and replace the battery after 1 minute and clock will set itself to one of the stand by position at 4, 8 or 12 o'clock position. Please refer to "Radio Controlled Clock Operation" above.

Date Display

Once a valid signal is received and time is corrected, briefly press the time button to toggle between the date and seconds display.

Reset function

The clock has a hands setting help function. By pressing the reset button at any time, the hands will automatically move to the 12 o'clock position. The motor will then stop, and display will show letters "bc". At that point the battery must be removed. Please wait at least 1 minute before reinserting the battery to start reception. The display will show the letters "bc".

Battery check system

If the battery is running low, the display will show the flashing letters "bc". A new battery should now be inserted.

GUARANTEE

2 year guarantee against material and workmanship defects (except battery). The guarantee is valid in those countries where the wall clock is officially being sold.

Broken or cracked lens screens are not covered under the Guarantee.



Braun info line

BRAUN HELPLINE

Should you have a problem with your product, please check your local service centre at:

www.braun-clocks.com
www.braun-watches.com

or contact +44 208 208 1833



WARNING! This product is covered by the Waste Electrical and Electronic Equipment (WEEE) directive. It should not be discarded with normal household waste but taken to your local collection centre for recycling.



This product conforms to the EMC requirements as per council directive 89/36/EEC.

Battery Precautions

1. Do not use rechargeable batteries.
2. Only batteries of the same or equivalent type as recommended are to be used.
3. Batteries are to be inserted with the correct polarity.
4. Keep batteries away from children.
5. Exhausted batteries according to local legal requirements. Do not dispose of them by throwing away with normal household rubbish.
6. Avoid short circuiting the contacts in the battery compartment and battery terminals.
7. Remove batteries from the unit if it will be not used for long period of time.

Battery Installation

- Install 1 X AA (1.5V), observing the correct polarity, into battery compartment located on the back of the clock, as shown in the diagram.

Braun is a registered trademark of Braun GmbH, Kronberg, Germany used under license by Zeon Ltd

BRAUN

BNC006 MSF
Wall Clock

User Instructions
Guarantee